



Please read this manual carefully before use and keep it in a safe place

Function indication

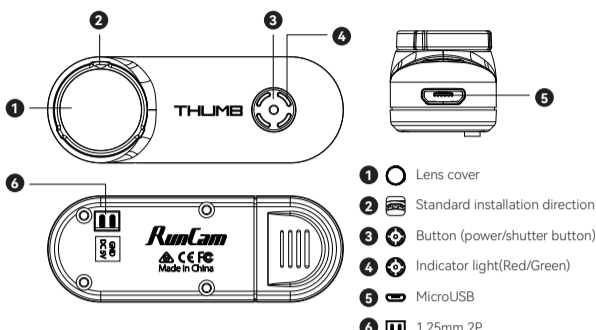


Micro SD Card

Support up to 128G, high-speed cards (above Class10) are recommended

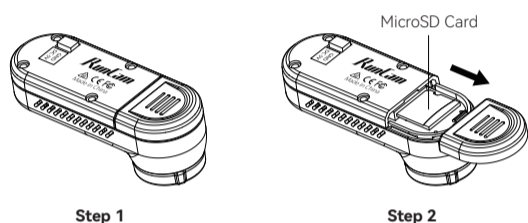


Camera connection operation

Step 1: Camera power connection

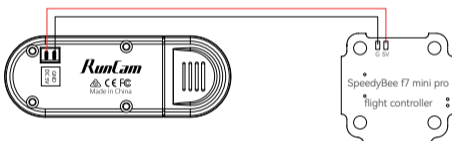


Step 2: Camera operation

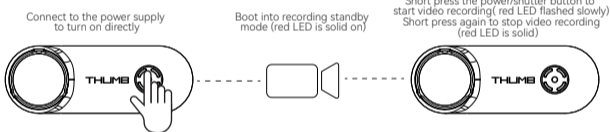

Note: Boot without SD card or SD card error, the red LED will flash quickly, please try to format the SD card or change another one and power the camera on again.

Connect to the computer

After turning on Thumb, connect it to the computer with a USB cable and it will be recognized as a removable disk.

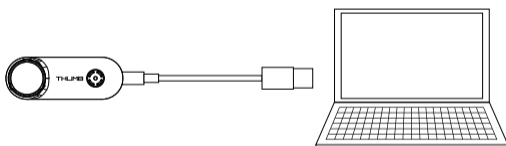

Note: If it cannot be recognized after connecting to the computer, please confirm that there is a microSD card inserted in the RunCam Thumb; if the files in the microSD card cannot be read normally, please replace the USB cable or the computer USB interface and try again.

Camera parameters configuration

1. Make sure the camera firmware version is V2.1.0 or above;
2. Make sure the SD card is inserted into the camera;
3. The thumb.conf configuration file will be automatically generated on the SD card when the camera is powered on;
4. Connect the camera to the computer and enter the U disk, and configure the camera parameters by editing thumb.conf;
5. Turn on the gyroscope data GCsv=1, save the changes and exit the U disk;
6. For more parameter settings, please browse thumb.conf;

Note:

- ① To enable the Gcsv function, it is recommended to use a high-speed card above 64G U3, otherwise data loss may occur;
- ② The Gcsv file will have the same name as the video file and will be saved in the same folder;

Firmware upgrade

Firmware upgrade status (green light flashes slowly, the upgrade will be completed soon if the green light flashes quickly, the camera is shut down after the upgrade is completed)

Please make sure that the USB power supply or terminal power supply is stable before upgrading.

Manually copy the firmware file (Thumb.bin) to the root directory of the camera's microSD card. For specific steps, please refer to: <https://runcam.com/download/Thumb>.

If you want your RunCam Thumb to get the latest features and perform best, please make sure that the camera software you are using is the latest version.

Technical Support

Please visit: <https://support.runcam.com/hc/en-us>